

3. Replacement of the lower bearing.

To replace the lower bearing we recommend you to contact your local service of concrete mixer or in repair workshop.

4. The replacement of the fan

4.1. Run p.1.1 of this manual

4.2. Remove the fan from the motor axis

4.3. Using a rubber hammer with the light blows put it on the axis of the engine.

* Completion of the concrete mixer from 2015.

PASSPORT

Concrete mixer BRS – 130 f / n * _____

Concrete mixer BRS - 165 f / n * _____

Concrete mixer BRS - 200 f / n * _____

**Meets the requirements 29.5-14261690.001-2004 of Ukraine Specifications
(* Factory number)**

CE Declaration of conformity

The producer stamp

Production date / / / **/(day/ month /year)**

Sold in working condition and complete set / / / **/(day/ month /year).**

Company-seller _____

Information on the warranty repair

Executive organization _____

№	Х-ка несправност	Виконані роботи	Дата

After performing the guarantee repair, warranty lasts only for the replaced spare parts for concrete mixers

Address of the Manufacturer company"Vector-08": Ukraine, 58023 Chernivtsi city O. Pchilka street. b.22. Tel. (380372) 585814, 586

Executive organization _____

e-mail: vp.vector08@gmail.com

www.vector-ua.net